

Copiers / MFP

Machine Model Number	Procedure to get Meter Reading
Ai 1515 / Ai-1515F / Ai-1810F / Ai-2020	Press the 'FUNCTION' key, press the 'DOWN ARROW' key till you get to the total counter, Press the 'SORT COPY/ENTER' key. Meter Reading will show on the display. Press the 'SORT COPY/ENTER' key to exit.
Ai-2310 / Ai-2310L / Ai-3010/ Ai-3010L	Meter is read off of an odometer on the Right side next to the On/Off switch.
Ai-4040 / Ai-5050	Meter reading is read off of an odometer - open front cover and it will be on the Top Left corner when you look at the machine.
DC-1256 / DC-1257	Meter is read off of an odometer on the Left side toward rear and above the On/Off switch.
DC-1460 / DC-1470	Meter is read off of an odometer, lift the original cover and look through the glass in the back right corner.
DC-1560	Meter is read off of an odometer on the Left side toward the rear.
DC-1755 / DC-2355	Meter reading is read off of an odometer. Open the front cover and it is located at the top center.
DC-1856 / DC-1860 / DC-2360	Meter reading is read off of an odometer. Open the front cover and it is located at the top center.
DC-3055	Meter reading is read off of an odometer located on the left side, toward the front, and above the ON/OFF switch.
DC-3060 / DC-4086 / DC-4090	Meter reading is read off of an odometer. Open the front cover and it is located on the left.
DC-5590 / DC-6090 / DC-6590 / DC-6595	Meter reading is read off of an odometer located on the right side, toward the front and below the ON/OFF switch.
KM-1500	Hold down the STOP/CLEAR button for 3 seconds. The meter reading will flash in the display.
KM-1510 / KM-1810	Hold the STOP/RESET button down, release when 'F-23' comes on the display. The Display will flash 2 sets of 3 digits (this is the meter reading) Press STOP/RESET button to exit.
KM-1530 / KM-2030	Meter reading is read off of an odometer located on the right side, above and in front of the ON/OFF switch.
KM-1650 / KM-2050 / KM-2550 / TASKalfa 180 / TASKalfa 181 / TASKalfa 220 / TASKalfa 221	Press the SYSTEM MENU/COUNTER button. Press the down scroll button to COUNTER CHECK, then press OK. Next press the down scroll button to PRINT COUNTER REPORT and press OK. A report will print out , the total count you want is at the top left of the page.

KM-1815 / KM-1820	Press the SYSTEM MENU/COUNTER button, then press the OK/ENTER button, then press the OK/ENTER button again. Use the ▼ button to scroll to STATUS PAGE and then press the OK/ENTER button then the YES button. The status page will print, once the page has printed press the EXIT button. The total page count is located at the bottom left of the page after the words TOTAL PRINTED PAGES.
KM-2530 / KM-3530 / KM-4030 / TASKalfa 420i / TASKalfa 520i	Meter reading is read off of an odometer located on the right side, top, toward the front.
KM-3035 / KM-4035 / KM-5035	Press the 'DEFAULT SETTING/COUNTER (upper right of operations panel). Display will change, press "COUNTER CHECK'. The meter reading is displayed under 'TOTAL' (B&W). Touch "CLOSE" then 'END' to exit. TO print the Meter reading report out press 'PRINT REPORT' when the total is on the display. The counter can also be printed from this display by pressing the 'Print Status Page' button located in the bottom left of the display.
KM-2540 / KM-2560 / KM- 3040 / KM-3060 / KM- 3050 / KM-4050 / KM- 5050	Press the 'Counter' button (upper left of the operations panel). Display will change to the counter display. The meter reading is the number in the top right counter of the display under the word 'Total'.
KM-4230 KM-4530 / KM- 5230 /KM-5530	Meter reading is read off of an odometer. Open the front cover and it is located at the top left corner.
KM-4850W / KM-P4850W / KM-P4845W	Meter reading is read off of an odometer located on the right side, toward the front, about halfway down the side.
KM-3650W	Meter reading is read off of an odometer located on the front of the machine toward the right side and center vertically.
KM-6030 / KM-8030 TASKalfa 620 / TASKalfa 820	Press the 'SYSTEM MENU/COUNTER (above the numeric keys on the right side of the operation panel). Display will change, press "COUNTER CHECK'. The meter reading is displayed under 'TOTAL' (B&W). Touch "CLOSE" then 'END' to exit. To print the Meter reading report out press 'PRINT REPORT' when the total is on the display.
KM-C830D	Meter reading is read off of an odometer located on the right side, top, toward the rear.
KM-C2520 / KM-C3225 / KM-C3232 / KM-C2525E / KM-C3225E / KM-C3232E / KM-C4035E	Press the 'SYSTEM MENU/COUNTER' button (upper left of operations panel). Display will change, press "CHECK THE COUNTER' on the touch screen. The total numbers of copies are listed in the 'TOTAL' column in the 4th row down. You can also press 'PRINT REPORT' (on the touch screen) and the total count will be shown on the printed page in the same location. Touch "CLOSE" then 'END' to exit.

TASKalfa 205c / 255c /
255 / 305 / FS-3540MFP /
FS-3640MFP / FS-
C2526MFP / FS-
C2626MFP

Press "System Menu / Counter" button. Press "Report". Press "Report Print". Press "Status Page". Press "Yes". The Status Page will print. Look for Counters in the right column just over 1/2 way down, then follow it down 4 lines to Total. The total page output is just to the right of the Total. Note don't use the Total at the bottom of the page, that is for scanned pages.

TASKalfa 250ci / 300ci /
400ci / 500ci / 552ci /
3050ci / 3550ci / 4550ci /
5550ci / 6550ci / 7550ci /
3500i / 4500i / 5500i /
6500i / 8000i

Press the 'Counter' button (upper left of the operations panel). Display will change to the counter display. The meter reading is in the "Total" row and "Total" column (be sure not to get the total "Scanned Pages"). Press "Close" to return to the main screen.

Printers

Machine Model Number

Procedure to get Meter Reading

DP-1400

With the printer in the 'Ready' state press the 'ENTER/STATUS' button, a status page will print, the meter reading will be on this page in the bottom right corner

FS-720 / FS-820 /
FS-920

Hold down the button above the green symbol that looks like a C laying on it's back till the green and amber lights flash (approximately 5 seconds) and then let go. A 'STATUS PAGE' will print (the printer has to be in the 'READY STATE' to do this). The total 'Printed Pages (s)' will be under the "Page Information"

FS-1000 / FS-1010 /
FS-1010+ / FS-1020D /
FS-1100 / FS-1120D /
FS-1300D / FS-1320D

Hold down the green 'GO' button for 5-10 seconds and then let go. The lights will flash and it will print a 'STATUS PAGE' (the printer has to be in the 'READY STATE' to do this).

FS-1016MFP

Press the 'MENU' button then use the ► button till the display says 'REPORTS', then press OK button. Press the ► button to 33 USAGE REPORT the press OK. It will print a usage report then return to ready.

FS-1028MFP /
FS-1028MFP/DP /
FS-1128MFP

Press the 'System Menu/Counter' button ('01 Report' will be highlighted). Press 'OK' button. Press the ▼ button (under the OK button), so '02 Status Page' is highlighted. Press 'OK' button. Press button under 'YES' in the display. Report will print. The Total Count is to the right of Total (not to be confused with the Total Scanned at the bottom of the right column. Press button under 'Exit' in display.

FS-3040MFP /
FS-3140MFP

Press the 'MENU' button then use the ▲▼ button till the display says 'COUNTER'. Press ► button and 'Printed Pages' and the total number of pages printed appears in the display. Press 'MENU' button to exit. To print out counter do following: Press 'Menu' button, Press ▲▼ button till 'Report Print' is in display, Press ► button, press ▼ button till 'Status Page' is in the display, press 'OK' button twice and 'Status Page' will print. Page count is in right hand column to the right of 'Printed Pages'.

FS-2000D / FS-3900D /
FS-4000DN

Press the 'MENU' button then use the ▲▼ button till the display says 'STATUS Page', then press ok/enter button twice to print status page with total page count. Or to display only press the 'MENU' button then use the ▲▼ button till the display says 'LIFE COUNTERS', press the ► 'Printed Pages' should be in the display along with the number of pages printed. Press the 'Menu' button to exit

FS-1350DN / FS-1370DN /
FS-2020D / FS-3920DN /
FS4020DN

Press the 'MENU' button then the ▲▼ button till the display says 'COUNTER'. Press ► button and 'Printed Pages' and the total number of pages printed appears in the display. Press the 'MENU' button to exit. To print the counter do the following: Press the 'MENU' button then the ▲▼ button till the display says 'Report Print' is in the display, press 'OK' button twice and 'Status Page' is in the display, press 'OK' button twice and 'Status Page' will print. Press the 'MENU' button to exit. Page count is in the right hand column to the right of 'Printed Pages'.

FS-1900 / FS-1920 /
FS-3800 / FS-3820

Press the 'MENU' button then use the ▲▼ button till the display says 'STATUS Page', then press enter twice to print status page with total page count. Or to display only press the 'MENU' button then use the ▲▼ button till the display says 'LIFE COUNTERS', press the ► to see total counter in display, press 'MENU' button to exit.

FS-8000C / FS-9100 /
FS-9120 / FS-9130 /
FS-9500 / FS-9520 /
FS-9530

Press the 'MENU' button, then the ▲▼ buttons till 'STATUS' shows in the display, press the 'ENTER' button twice to print status page. Use the 'TOTAL PAGE' number under page information.

FS-C5016N /
FS-C5020N /
FS-C5030N /
FS-C8026N

Press the 'MENU' button, then the ▲▼ buttons till 'LIFE COUNTER' or 'PRINTED PAGES' shows in the display, press the ► button, then the ▲▼ till 'TOTAL PRINT' appears in the display. Press 'MENU' button to exit. To print 'STATUS PAGE' press the 'MENU' button, then the ▲▼ buttons till 'PRINT STATUS PAGE' is on the display, the 'ENTER' button twice and a 'STATUS PAGE' will print. Total count is under 'Page Information' and to the right of 'Printed Pages'.

FS-C5015N /
FS-C5025N /
FS-C8100DN

To print 'STATUS PAGE' press the 'MENU' button, then the ◆◆◆▼ buttons till 'PRINT STATUS PAGE' is on the display, the 'ENTER' button twice and a 'STATUS PAGE' will print. Total count is under 'Page Information' and to the right of 'Printed Pages'.

FS-C5100DN /
FS-C5150DN /
FS-C5200DN /
FS-C5250DN /
FS-C5300DN /
FS-C5350DN

To print 'STATUS PAGE' press the 'MENU' button, then the ▲▼ buttons till 'REPORT PRINT' is on the display, then press ◆◆ button once then ▲▼ buttons until 'STATUS PAGE' is in the display. Press the 'OK' button twice and a 'STATUS PAGE' will print. Total count is under 'Counters' in the right column. To view the total count in the display. Press the 'MENU' button, then the ◆◆▼ buttons till 'COUNTER' shows in the display, press the ► button, then the ▲▼ till 'PRINTED PAGES' appears in the display. Press 'MENU' button to exit.

FC-C8500DN

To print 'STATUS PAGE' press the 'MENU' button, then the ▲▼ buttons till 'REPORT PRINT' is on the display, then press 'OK' button once then ▲▼ buttons until 'STATUS PAGE' is in the display. Press the 'OK' button once the select 'Yes' to confirm and a 'STATUS PAGE' will print. Total count is under 'Counters' in the right column. To view the total count in the display. Press the 'MENU' button, then the ▲▼ buttons till 'COUNTER' shows in the display, press the 'OK' button, then the ▲▼ till 'TOTAL' appears in the display, press the 'OK' button and the total number of pages printed is displayed. Press 'MENU' button to exit.

Fax

KM-F1060

1. Set the machine to Service Mode by pressing the "FUNCTION," "ORIGINAL SIZE" and "3" keys sequentially. Then F1 will appear in the display.
2. Press "7" key on the Keypad.
3. Press the "Start" key.
4. Enter "02," or press "V" or "\/" arrow keys to reach the 02 code (for Total Count).
5. Press the "Set" key.
6. Enter the code 02 and press the "Set" key. This should print the configuration page.
7. To exit the service mode, press "STOP," then press "FUNCTION" and "CLEAR" sequentially to exit the service mode.